

MP1.1 Battery Powered Pistol Grip Megaphone With 400m Voice Range



CONSUMER



Instruction manual

Thank you for choosing Bassface. From the simplest connector to our top of the range amplifier - every element of these products has been designed to give you the best possible performance for your money. Please take the time to read these instructions carefully as they contain useful and important information. Modern high power audio systems can generate voltages at the speaker similar to mains operated equipment - for some reason everyone seems to ignore or forget this. Your wiring needs to be good to be safe. Please remember this and take your time. Please exercise caution when setting volume levels - powerful audio equipment can easily produce enough sound to permanently damage hearing. Remember that audio competitors use ear protection when operating and competing. Do remember that incorrect installation or abuse is not covered under warranty - please make sure that your installation and any partnered product is suitable and compatible. If you are unsure please seek qualified advice before proceeding. Always use appropriate hand and eye protection when working with tools, and always work within your capabilities as an installer. We offer a 12 month manufacturer warranty via your distributor or retailer. Please retain your purchase receipt as proof of purchase. Please note that Bassface operates a policy of continuous product development and we reserve the right to change specification without prior notice. You can follow our process on our website by reviewing the version history information.

Please note that we sometimes include information inside these manuals which we feel is of potential value to the client on related subjects such as conversion charts, capacitance values or wiring diagrams. Please feel free to copy any of this information since it is in the public domain.



Open the back cover by pressing the Open Button. Insert 4 x D Batteries then close the cover until it locks. Rechargeable batteries are mentioned in the instructions included with the product but we DO NOT recommend the use as the voltage is nominally lower, resulting in less output. To activate the megaphone press the ON/OFF button on the back cover. When using the megaphone, place your lips as close as possible to the microphone orifice. Adjust the volume control to the desired level without causing any howling or feedback. Press ALARM button to activate the siren function. To record, adjust the volume level to minimum then press the RECORD button and note the indicator light which comes on. Make your recording up to 10 seconds, then press RECORD again. To activate the recording on a loop, press PUT SOUND PLAY button.



When inserting batteries please take care to ensure correct polarity. Insert the batteries with the (-) marks on the batteries aligned close to the spring in the back cover. When the megaphone will not be used for long periods always remove the batteries to prevent leakage. Please note that using drained batteries will lower the output level.

